POWER ACOUSTIK

Owner's Manual

EN

AV Center 2-DIN Headunit

2 DIN 10.6" Monitor
Touch screen
MP3/MP4
USB/SD
AM/FM Radio
Support Apple CarPlay
Support Android Auto
Support Bluetooth





androidauto











Content

1. Appearance	3
2. Accessories and Installation	3
3. Wiring Connection	5
4. Front panel Description	7
5. Remote Control	8
6. Main Menu	9
7. Settings	9
8. Apple CarPlay & Android auto	11
9. Radio	12
10. USB	13
11. BT Audio	14
12. BT Phone	.15
13. AV IN	.17
14. Specification	.18
FCC Notes	.19
Warranty	20

2. Accessories & Installation

Appearance

Main Menu



Apple CarPlay Menu



Android Auto Menu




Accessories & Installation

Package contains the following accessories for installation and operation of the unit.

(1)	Mounting bracket	2	
(2)	Screw	8	00 00 00 00 00 00 00 00
(3)	Remote	1	
(4)	Trim Ring	1	
(5)	User Manual	1	POMENT PRODUCTIVE FOR COME JOHN MARGINE POMENT OF SECTION POMENT O
(7)	Wire Harness	1	
(8)	4 Pin Connector	1	
(9)	USB cable	1	

2. Accessories & Installation

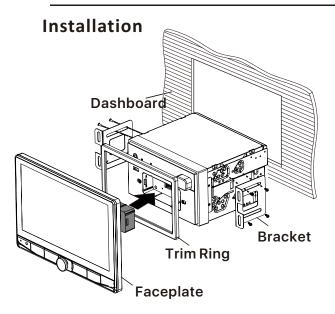

Installation

- 1. Put the 2 brackets to the left and right side of the headunit.
- 2.Use screws to fix the brackets to the unit.
- 3.Install the body chassis into the dashboard via the 2 brackets.
- 4.Install the trim ring to the body chassis.
- 5. Install the faceplate.

Note: Please note this faceplate is not designed for detachable.


Disconnect / Connect the screen connector ONLY for installation in the vehicle.


Note:

- Make sure the ignition is turned off, and disconnect the cable from the vehicle battery's negative (-) terminal.
 - You never want electricity running when you install this 2-DIN car receiver.
- 2. Before installation, disconnect the wire harness and the antenna.
- 3. Attach the brackets on the both sides of the car receiver with screws as shown as the installation drawing. Please buy from your dealer according to the drilling of holes size.


- 4. Consult with your nearest dealer if installation requires the drilling of holes or other modification of the vehicle.
- 5. Install the car receiver in the dashboard.
- 6. Connect the wire harness & antenna to the car receiver being carefully not to pinch any wires or cables.
- 7. Install the plastic outer trim ring onto the car receiver.
- 8. Reconnect the battery and run through all of the options on this car receiver to ensure that everything is working correctly.
- 9. Particulars will vary widely depending upon the kind of your car and the car you intend to install it in. Please choose the correct installation method according to the actual situation of your car. Always contact the car dealer or manufacturer if you have any questions.

Faceplate Adjustable Position

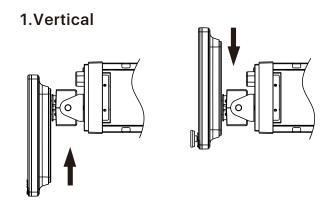


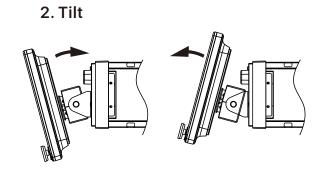

3. Swivel

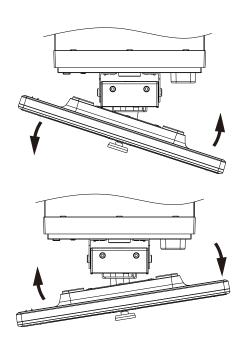

Un-Installation

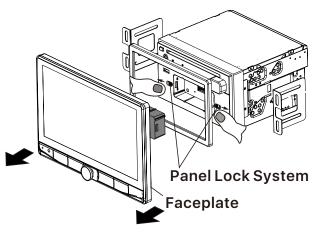

- 1.Pull and release the panel lock system.
- 2. Pull out the faceplate.

 
Note: Please note this faceplate is not designed for detachable.

Disconnect / Connect the screen connector ONLY for installation in the vehicle.


Parking wire

Note: The parking wire is connected with brake signal; for safety, the programs can be seen on the monitor after braking the car..

Note: To watch video the parking wire should be connected to brake signal.




Connecting the reversing line to taillight on the car

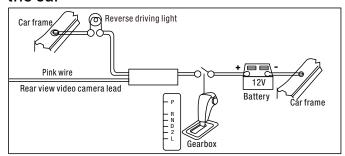


After connecting, when you start up the reverse gear, the unit will receive the picture from car rear view camera.

Speaker Connection

Connect the speakers according the following diagram, incorrect connections will damage the unit or your loudspeakers

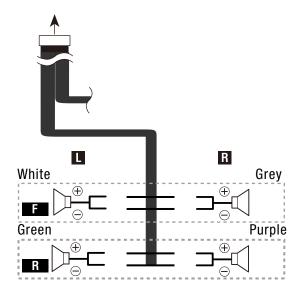

3. Wiring

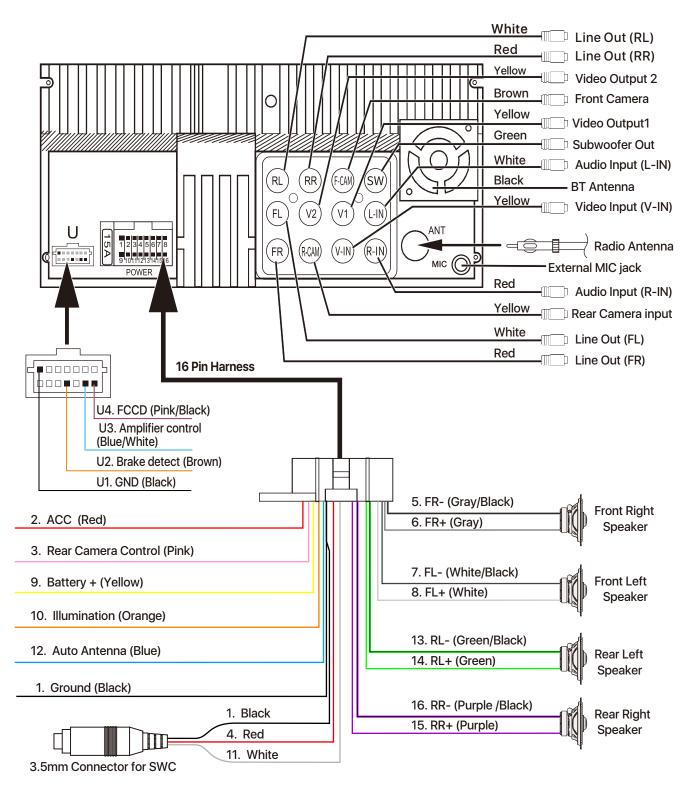


Note: To use the steering wheel control feature, you need an universal remote adapter (not supplied) matched your car.

Fuse: Max 15 Ampere

Voltage: 12V(DC); Negative Ground

4. Front panel Description

Front panel

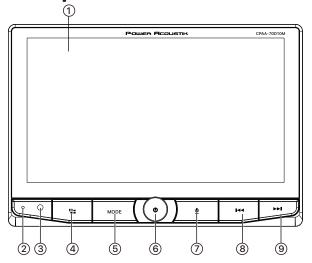

- 10.6 inch TFT LCD
- Ø Mic Build in Microphone.
- IR Sensor of Remote
 IR remote control signal receiving window.
- MENU button Press to back to Main menu.
- (5) MODE button
 Press to select desired mode.


Rotary Control
On/Off button
Short press to switch On the source unit.
Long press to switch Off the source unit.

- In operation, short press to Mute the sound system, press again to Un-Mute. In operation, rotate to adjust the sound output level.
- Siri button When Apple CarPlay or Android Auto available, hold Siri button to start the voice control function.
- (8) Idd / ▶►I button
- [Radio] Press to select previous/ next preset radio station for broadcasting.


Press and hold to seek downward or upward.

[USB/SD Music] Press repeatedly to shift track previous or next for playback. Press and hold to active various fast rewind or fast forward speeds for playback. [Bluetooth Music] Press repeatedly to shift track previous or next for playback.

Base:

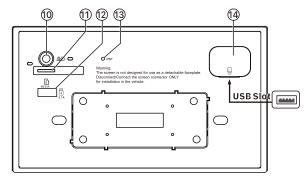

- ① AUX in jack Insert an extrenal device to this port in order to have sound output of that external device through the unit.
- Micro SD slot Insert micro SD for playback.
- (12) Fast charging USB port Support fast charge USB port.
- Reset button Press to default factory settings.
- USB port Connect USB for digital playback. Connect your iPhone for Apple CarPlay. Connect your Android Phone for Android Auto.

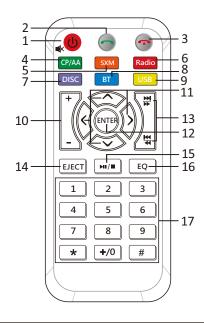

Press and hold to power it on or off.

Short press this button mute the volume output when unit turn on.

Long press is Power OFF function when unit turn on.

2. [Bluetooth]: Press it to make a call after inputted a phone number or answer an incoming call.

3. [Bluetooth]: Press it to reject a coming call or hangup while calling

Press it to switch to CarPlay or Android Auto mode; Head Unit will show string "invalid operation" when CP/AA is not pluged in Head Unit.

5. SXM CPAA-70D10M have not this function..

6. Press it to switch to RADIO mode.

7. CPAA-70D10M have not this function..

8. Press it to switch to Bluetooth mode.

9. Press it to switch to USB mode.

10. Press it to increase or decrease the volume level. VOL+/-11. It is UP /Down/Left/Right Arrow, use this button to select the menu item. ^/~/>/< the title track or to show next frame. >/< [Radio] Press to seek upward/ downward. 12. Press it to confirm selection. **ENTER** [Radio] Press to select next/ previous preset radio station for broadcasting. [USB/SD]: short press it to skip to 13. the next track or previous functions. Long press to activate fast forward or fast review in a track. [Bluetooth Music]: short press it to skip to the next track or previous functions. 14. Press it to eject the disc. **EJECT** 15. [USB/SD]: short press it to switch play or pause. **▶**II/**■** 16. Press it to Equalizer functions. EQ **17**. [Radio]: Select 1-6 desired preset 0-9 station. *

[USB/SD]:Input 0-9 for selecting track number.

[BT Phone]:Input 0-9/*/# for desired phone number.

Note: 1. SXM just for include SiriusXM function models.

2.*# these functions for Bluetooth.

7.Settings

CPAA-70D10M is a 2-DIN car audio with following functions:

Apple CarPlay, Google Android Auto, Radio, Bluetooth, USB, SD.

The Mode icon in gray means the corresponding function is not ready or proper device have not been connected.

Touch the corresponding Mode icon to enter playing mode.





Main Menu



With Apple CarPlay



With Android Auto

Setup, to enter the Settings Menu.

Turn off TFT display.
TFT enter black mode touch any zone return to TFT on.

Touch the icon to enter the Setup menu. The Setup menu is included Time Settings, Audio Settings, General Settings, Wallpaper Settings.


Time Settings

The Time Settings allow the user to set Date & Time.



Audio Settings

Below shown is the Audio Setting Menu.

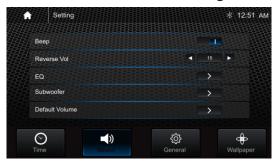

Beep: set the Beep tone is ON or OFF. Reverse Vol: adjust the Vol value is 0-30.

EQ Settings

Balance/Fader:

Loudness: set the Loudness is ON or OFF.

Touch the "◄" or "▶" of Balance /Fader to tune
for the driver and passenger preference.

The value of Balance (Left12-Right 12) and
Fader (Front 12- Rear 12).

Touch Reset to set both Balance and Fader to 0.




10-Band Equalizer:

10 band of EQ tuning, slide the EQ bar to tune each band frequency level according to user preference.

Touch Reset to set all Band to 0.



Subwoofer:

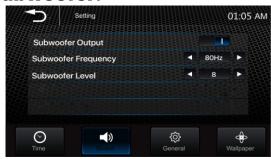

Subwoofer Output: On/Off.

Subwoofer Frequency: 50Hz/80Hz/120Hz

/160Hz


Subwoofer Level: -10~+10

Volume Control:



Set the Main / BT Talking /Navi /Voice default volume value.

General settings:

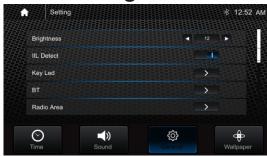





Brightness: Adjust the screen's brightness

from 0-15.

Illumination Detect: On / Off.

Key Led:



LED Auto: On/Off.

ON: the Led color will change automatically. OFF: select required LED light color: White / Red/ Yellow /Blue/Green/Purple /Light Green.

BT:



Radio Area:


Select the region: America/Europe/ Eastern Europe/ Japan / Southeast Asia /Latin America / Asia / Australia.

RDS: On/Off.
Rear Camera:



Rear Camera View: Normal/Reverse Parking Assist Guide: On/Off Parking Assist Guide Adjustment

Touch ">to enter Parking Assist Guide Adjustment interface to show the below screen:

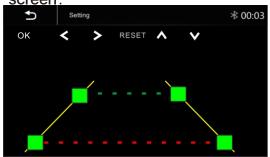

Select the adjust position and Touch < / > / ^ v to adjust.


Touch Reset to resume the default Parking Assist Line.

Language: Select the desired language.

Driving Position: select the driver position is **Left** or **Right**.

Drive Forbidden Watch Video: On /Off.


Serial & Version:

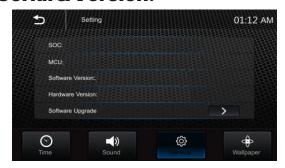

Reset Factory Data: Once selected, the unit will prompt to confirm reset to factory settings. Once confirmed the system will automatically reboot.

Wallpaper:

User can select the preset wallpaper for prefer background.

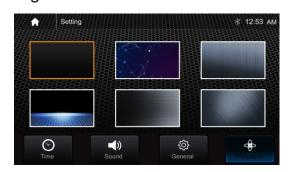

8.1 Apple Carplay

Plug the iPhone (iPhone 5 or latter models, and IOS 7.1 or above) through the lightening cable to the USB port of the source unit. The iPhone will be shown the "CarPlay". The source unit will enter the CarPlay interface, the APP that support the CarPlay feature will be displayed on the source unit as shown below. Touch the corresponding

APP can operate, touch button to go back the CarPlay interface.





9.Radio mode

Siri

In Carplay mode, user can talk to Siri to control the CarPlay functions. Press to start the Siri function, or touch the button for 2 seconds or the HOME button of iPhone. Now you can talk to Siri for playing music, I am going....

Note: For Siri function in the source unit, the Micriphone has to be connected.

In CarPlay mode, touc"Home" button or

icon to go back the main menu of source unit.

8.2 Android Auto Operations

Android Auto enables you to use functions of your Androd device convenient for driving. You can easily access route guidance, make calls, listen to music, etc. For details about Android Auto, visit https://www.android.com/auto or

https://support.google.com/androidauto.,

Compatible Android devices

You can use Android Auto with Android devices of Android version 5.0 or later.

Note: Android Auto may not be available on all devices and is not available in all countries or regions.

Operations:

- 1. Connect an Android device via USB terminal. To use the hands-free function, connect the Android device via Bluetooth. When an Android device compatible with Android Auto is connected to USB terminal, the device is connected iva Bluetooth automatically, and the Bluetooth smartphon currently conected is disconnected.
- 2. Unlock your Android device
- 3. To enter Android Auto mode, touch Android Auto icon in the head unit screen. You can perform the operations of the Apps of the connected Android device.
- 4. In Android Auto model, touch "

 to the head unit main menu."



12:32 Google Maps YT Music Spotify Phone Power Acoustik Beyond Pod Calendar iHeartRadio

Radio mode

Touch the Radio mode icon to enter Radio.





Touch FM1 to select FM1 Band.

Touch AM1 to select AM1 Band.

Touch to select Band, FM1>FM2
>FM3>AM1>AM2

Short touch to prescan searching, each scanned station will be played 10s. Long touch for auto searching.

Touch to enter EQ settings.

Touch to switch LOCAL or DX.

Touch to input tune directly.

Short touch to Seek-, long touch for Step-

Short touch to Seek+, long touch for Step+

Preset station,6 preset store and recall station for each band.

Store a Station

- 1. Tune radio to desired station.
- 2. Touch and hold the one of the preset station for more than 3 seconds, then the preset button will be highlighted on the screen, and the preset station will be stored.

USB

Plug the USB, the USB icon will be colorful. Touch the USB icon to enter the USB playback mode. The source unit default the play the Audio in the USB device.






- Press to list Audio , Video, Picture files in USB.
- Short press to skip previous track, Long press to fast reverse.
- Play or pause button.
- Short press to skip next track, Long press to fast forward.
- Press to select Repeat All > Repeat 1> Repeat Directory.
- Press to switch Random is On or Off.
- Press to select Audio setting or set the prefer EQ of each band in custom mode.
- Touch to handle goto page for input the track number directly.

File List browsing

Touch to browse the folder and file list of the USB device.


You can select the multi-media type.

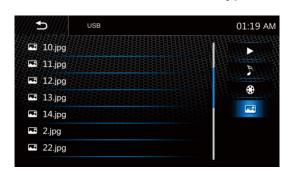

- Return to playing previous file.
- Select Audio or Music files.
- Select Movie or Video files.

 Select Picture files.

Video

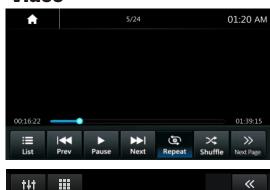

- Press to list Audio , Video, Picture files in USB.
- Short press to skip previous track, Long press to fast reverse.
- Play or pause button.
- Short press to skip next track, Long press to fast forward.
- > Press to switch Random is Shuffle On or Off.
- Press to select Repeat All > Repeat 1> Repeat Directory.
 - >> Touch to select the second page of the keypad.

11.Bluetooth Audio


†|| EQ Press to select Audio setting or set the prefer EQ of each band in custom mode.

Goto

«

Touch to handle goto page for input the track number directly. Touch to select the first page of the keypad.

Picture

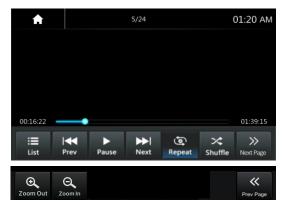

Q Zoom Out

Press to Zoom Out the picture.



Press to Zoom In the picture.

Bluetooth Audio

Touch the BT Audio icon to enter Bluetooth Audio playing mode. If the Bluetooth is connected, the music will be playing as following shown;



Bluetooth Audio Playback





Press to skip previous track



Play or pause button.



Press to skip next track.



Press to switch Random is On or Off.



Press to select Repeat All > Repeat 1> Repeat Directory.



Press to select Audio setting or set the prefer EQ of each band in custom mode.

Bluetooth Connect

If the Bluetooth is not connected, press Reconnect the paired phone or paring to pair the new device.







Bluetooth Pairing

Pairing mode screen will be shown as below:





Turn On the Bluetooth of the mobile phone or Bluetotth device, you can see the CPAA-70D10M, select the CPAA-70D10M for pairing and connection.

Bluetooth Phone

Touch the Phone icon in main menu to go to Phone mode. After the mobile phone is connected with the source unit via Bluetooth (HFP), user can through the source unit to make a phone call. Please note it needs to connect the microphone for phone call.





Keyboard

Dial Pad. tap it to enter call mode.



Call logs, to show the call record, missed, received and dialed calls



Contact, tap to show the phone-book connected phone.



Show the usable devices.



BT Setup, tap to set auto answer and load phonebook.



Search the available devices.



Manage the connected device.

Make a Call

1. Touch the Keyboard icon to enter below screen.

2. Using the keypad, touch 0-9,*,#, enter the phone number you wish to dial. If you input

an incorrect number, touch the icon on the keypad to delete the incorrect number.

3. Once the correct number appears on the

screen, touch the interface.



icon. To go to dialing



4. To end the call, touch the icon on the screen.



Receive an incoming call

If the Phone is connected with the source unit via Bluetooth, when an incoming call, below screen will be shown:



Press to answer the incoming call.



Call Logs

Touch the icon combined list.



Slide the bar at right side up and down to display a call logs up to 20 records.

Contacts

Touch the icon to access the phone book of the connected mobile phone.

To make a call from the phonebook, simply touch the contact name.



BT Setup



BT On /OFF, Power On or Off BT function.

Auto Answer On /OFF, incoming call auto answer.

Auto Loadpbk, On /OFF, when connectphone auto load phonebook on or off.

Loadpbk, Manually load phone book.

13.AV IN

The Audio/Video source with RCA cable can through the source unit to play the Audio/Video. Plug the RCA to the corresponding A/Vsocket.

Touch the icon to view to Audio /Video.

to view the playing



The Audio and Video will via the RCA cable to the source unit.

14. Specification

General

Power Supply	DC10~16Volts
Grounding System	Negative Ground
Current Drain	15A(Max.)
Max Power Output	4×75W/channel
RMS Power Output	4x25w/channel
Speaker Impedance	4~8ohms per channel
Frequency Response	20Hz~20KHz
Operating Temperature	20~+60℃
Dimensions	255mm(W)x200mm(D)x175.1mm(H)
TFT Display	
TFT Screen size	10.6inch
	1024x600 pixels
TOO GUITATIAN TO	1024X000 pixolo
FM Radio	
Frequency Range (USA)	87.5~107.9MHz
Frequency Range (Europe)	87.5~108MHz
Usable Sensitivity (S/N=30dB)	≤15dB
S/N Ratio	≥55dB
Stereo Separation	≥30dB
АМ	
Frequency Range (USA)	530~1710KHz
Frequency Range (Europe)	522~1620KHz
Usable Sensitivity(S/N=20dB)	≤40dB
S/N Ratio	≥45dB
Line-Out/Subwoofer Output	
Maximum Output Level (10K ohms load)	≥4Vrms
	0~18ms

FCC Notes

WARNING! Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/ TV technician for help.

LIMITED 90-DAY CONSUMER WARRANTY LIMITED ONE-YEAR CONSUMER WARRANTY WITH PURCHASE AND INSTALLATION BY A Power Acoustik AUTHORIZED DEALER

Power Acoustik promises to the original purchaser, to repair or replace this product with a new or refurbished unit (at Power Acoustik's sole and absolute discretion) should it prove to be defective in workmanship or material under normal use, for a period of one-year from the date of purchase from the PowerAcoustik authorized retailer, PROVIDED the product was purchased and installed by a Power Acoustik authorized retailer. During this one-year period, there will be no charge for product repair or replacement, PROVIDED the unit is returned to Power Acoustik, return shipping pre-paid, along with the required proof of installation, the bill of sale or other dated proof of purchase, and the consumer's contact information.

If the unit is installed by anyone other than a Power Acoustik authorized retailer, the warranty period will be 90-days from the date of purchase. This warranty is nontransferable and does not apply to any unit that has been modified or used in a manner contrary to its intended purpose, and does not cover damage to the unit caused by installation orremoval of the unit. During this 90-day period, there will be no charge for the repair or replacement PROVIDED the unit is returned to Power Acoustik, return shipping prepaid, along with the bill of sale or other dated proof of purchase and the consumer's contact information.

This warranty is void if the product has been damaged by accident or unreasonable use, neglect, improper service or other causes not arising out of defects in materials or construction. This warranty does not cover the elimination of externally generated static or noise, or the correction of antenna problems or weak reception, damage to speakers, accessories, electrical systems, cosmetic damage or damage due to negligence, misuse, failure to follow operating instructions, accidental spills or customer applied cleaners, damage due to environmental causes such as floods, airborne fallout, chemicals, salt, hail, lightning or extreme temperatures, damage due to accidents, road hazards, fire, theft, loss or vandalism, damage due to improper connection to equipment of another manufacturer, modification of existing equipment, or Product which has been opened or tampered for any reason. Units which are found to be damaged by abuse resulting in thermally damaged voice coils are not covered by this warranty but may be replaced at the absolute and sole discretion of Power Acoustik. Unit must be returned to Power Acousitk, postage pre-paid, with bill of sale or other dated proof of purchase bearing the following information: consumer's name, telephone number, and address, authorized retailer's name and address, and product description. Please contact Power Acoustik warranty office at 800-724-1377 or repairs@poweracoustik.com to obtain a Return Authorization Number prior to shipping the product.

Note: This warranty does not cover labor costs for the removal and reinstallation of the unit. IN ORDER FOR THE ONE-YEAR WARRANTY TO BE VALID, YOUR UNIT MUST BE SHIPPED WITH PROOF OF PURCHASE & INSTALLATION BY A POWER ACOUSTIK AUTHORIZED RETAILER. ALL UNITS RECEIVED BY POWER ACOUSITK FOR WARRANTY REPAIR WITHOUT PROOF OF POWER ACOUSTIK AUTHORIZED DEALER INSTALLATION AND PURCHASE WILL BE COVERED BY THE LIMITED 90-DAY WARRANTY.

BY PURCHASING THIS PRODUCT, ALL WARRANTIES INCLUDING BUT NOT LIMITED TO EXPRESS WARRANTY, IMPLIED WARRANTY, WARRANTY OF MERCHANT ABILITY, FITNESS FOR PARTICULAR PURPOSE, AND WARRANTY OF NON-INFRINGEMENT OF INTELLECTUAL PROPERTY ARE EXPRESSLY EXCLUDED TO THE MAXIMUM EXTENT ALLOWED BY LAW, AND POWER ACOUSTIK NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO ASSUME FOR IT ANY LIABILITY IN CONNECTION WITH THE SALE OF THE PRODUCT. POWER ACOUSTIK HAS ABSOLUTELY NO LIABILITY FOR ANY AND ALL ACTS OF THIRD PARTIES INCLUDING ITS AUTHORIZED DEALERS OR INSTALLERS. BY PURCHASING THIS PRODUCT, THE CONSUMER AGREES AND CONSENTS THAT ALL DISPUTES BETWEEN THE CONSUMER AND POWER ACOUSTIK SHALL BE RESOLVED IN ACCORDANCE WITH CALIFORNIA LAWS IN LOS ANGELES COUNTY, CALIFORNIA. Some states do not allow limitation on how long an implied warranty lasts. In such states, the limitation or exclusions of this Limited Warranty may not apply. Some states do not allow the exclusion or limitation of incidental or consequential damages. In such states, the exclusion or limitation of this Limited Warranty may not apply to you. This Limited Warranty gives you specific legal rights, and you may have other rights which vary from state to state.